



WebSteering

Stay ahead of the drill bit

Installation Guide for

GVERSE WebSteering 2016.1.2



© 2001 - 2016 LMKR Holdings. All Rights Reserved.

This publication is copyright protected. No part of this publication may be copied or distributed, transmitted, transcribed, stored in a retrieval system, or translated into any human or computer language, in any form or by any means, electronic, magnetic, manual, or otherwise, or disclosed to third parties without the express written permission of:

LMKR Holdings

Corporate Headquarters
Unit No. B1501, Latifa Tower
Sheikh Zayed Road, Dubai, UAE
P.O. Box 62163
Phone: +971 4 372 7900
FAX: +971 4 358 6386
Internet: www.lmkr.com

Trademark Notice

GVERSE™ WebSteering™, Predict3D™, Attributes™, Connect™, Planner™ are trademarks of LMKR.

DecisionSpace, Discovery, GeoGraphix (stylized), GeoGraphix Exploration System, GeoLink, GES, GESXplorer, GMAplus, IsoMap, LeaseMap, LogM, OpenWorks, OpenWorks Well File, PRIZM, SeisVision, Xsection are trademarks, registered trademarks or service marks of Landmark Graphics Corporation.

All other trademarks are the property of their respective owners.

Disclaimer

The information contained in this document is subject to change without notice and should not be construed as a commitment by LMKR. LMKR assumes no responsibility for any error that may appear in this manual. Some states or jurisdictions do not allow disclaimer of expressed or implied warranties in certain transactions; therefore, this statement may not apply to you.

Contents

- Introduction 1
- System Requirements 1
 - Software 1
 - Operating System 2
 - Hardware 2
 - Licenses 2
- Installation 3
 - Installing GVERSE WebSteering 3
 - Uninstalling GVERSE WebSteering 5
- Licensing 7
 - Configuring the License 7
- Third Party Applications 10
- International Trade Compliance 11
- Definitions 11
- Contacting LMKR Support 12

Introduction

LMKR is pleased to announce the release of the GVERSE™ WebSteering™ 2016.1.2 software

The WebSteering software is designed specifically to help geoscientists' geosteering horizontal wells in thin pay zones and to direct the bit in real time.

GVERSE WebSteering installs into the web browser with a few button clicks. Then it's a simple process to load LWD and surveys from the rig, add type logs and subsurface grids from GeoGraphix®, and start steering. At any point during this process, LWD data can be sent back to GeoGraphix for further analysis using GeoGraphix's feature-rich suite of tools. GVERSE WebSteering runs even when disconnected from your corporate network so whether you are in the office or working remotely, you can define your target surface and send updated drilling targets to the rig. The software is part of the GVERSE application suite by LMKR (<http://www.lmkr.com/gverse>).

LMKR GVERSE consists of geoscience and engineering solutions focused on workflow optimization and enhancing the productivity of the teams working on diverse geological and geophysical projects. These applications help cut the processing time required for interpretations resulting in fast, easy to use scalable tools that are inter-operable with other known geoscience software suites; enabling a connected multi skilled workforce.

This document guides you through the installation and license configuration processes of the WebSteering software. It also lists the system requirements necessary to install and run the software.

System Requirements

The following sections list system requirements for the WebSteering software.

Software

The software that must be installed on the system running the WebSteering software are as follows:

- GeoGraphix Discovery 2016.1.1 or 2015.1.4
- Microsoft .NET Framework 4.2 or greater
 - Note:** The service pack 2015.1.4 contains critical updates and must be installed in order for WebSteering to function properly with GeoGraphix 2015.1.
- LMKR License Management Tool 2016.1 for WebSteering license
 - The LMKR License Management Tool (LMT) must be installed to configure the WebSteering license.
- Adobe Reader for selected help files (optional)

Note: It is recommended that you run WebSteering on Internet Explorer 11.x.x or later and Google Chrome 42.x.x.x or later.

Operating System

To run the WebSteering software, you need the Windows® 7 operating system installed on your system.

Note: It is recommend to use the latest Microsoft® service packs and security patches.

Hardware

The hardware requirements for the WebSteering software are as follows:

- Quad 2.4 GHz 64-bit Intel class® or better
- 4GB RAM or greater
- 1024x768 graphics resolution

Licenses

The following licenses are required to run the WebSteering software:

- GVERSE WebSteering 2016.1 license
- GeoGraphix Discovery 2016.1 or 2015.1 license

Note: Refer to the LMKR Customer Support Portal (<http://support.lmkr.com/>) for up-to-date information on the requirements.

Installation

This section guides you through the installation and uninstallation processes of the WebSteering software.

Installing GVERSE WebSteering

Prior to installation, please make sure that supported version of GeoGraphix is installed on the system. To install the WebSteering software:

1. Download the software from the **LMKR Support Portal - Downloads** page (<http://support.lmkr.com/>).
2. Navigate to the location where you downloaded the installation setup.

Note: Before starting the installation, please make sure that all open applications are closed.

 
3. Double-click the setup icon for the WebSteering software setup executable file (EXE).

The Installation Wizard dialog displays.



4. Click **Next**.

The END USER LICENSE AGREEMENT dialog displays.

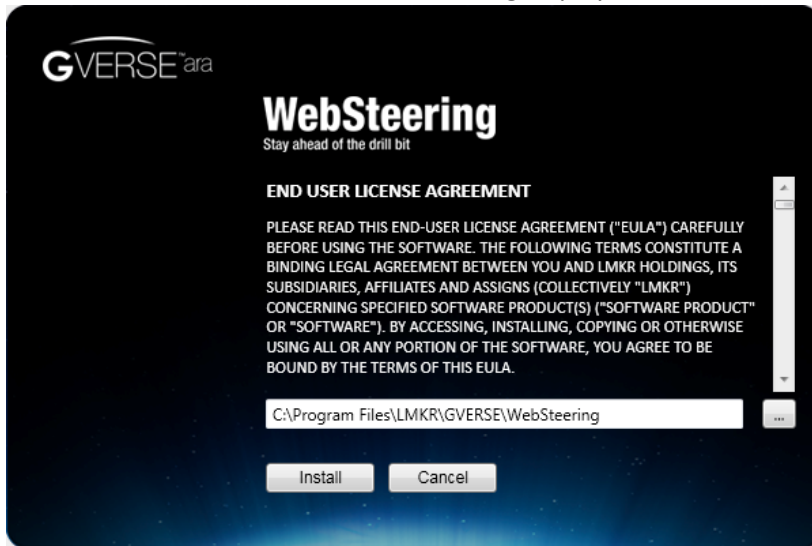

5. If you agree to the license agreement, then click **Install**.

The installation process initiates and the dialog displays the installation progress.



When the installation finishes, the Exit dialog displays.



6. Click **Exit** to complete the installation.

Uninstalling GVERSE WebSteering

To uninstall the WebSteering software:

1. From the **Windows Start** menu, select **Control Panel**.

The Control Panel window displays.

2. From **Programs**, select **Uninstall a Program**.

The Programs and Features window displays.

3. In the list of applications, double-click **GVERSE WebSteering**.

The dialog to uninstall the WebSteering software displays.

 


4. Click **Uninstall**.

The uninstall process initiates and the dialog displays the uninstallation progress.



Once the WebSteering software is uninstalled from your system, the 'Uninstallation complete' message displays.

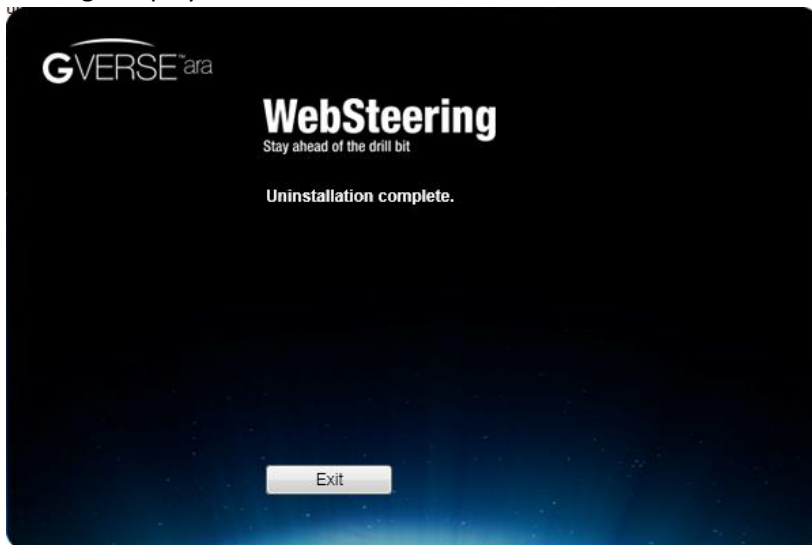

5. Click **Exit** to finish the uninstallation.

Licensing

To run the WebSteering software, you need a valid LMKR license. Please contact COS@lml.com to request a license. Once you receive the license, use the LMT to configure it for a single system. This can be done either before or after the WebSteering software installation.

Note: The GVERSE WebSteering software only supports a Standalone Client License type.

If a license file is not configured, then the software does not open and an error message displays. In this case, you must configure the license using the LMT, and then re-launch the WebSteering software.

 
This section provides basic information on how to configure the WebSteering software license using the LMT. For detailed information on how to install the LMT and configure the WebSteering software license, please refer to the LMT installation document.

Configuring the License

To configure a standalone client license for the WebSteering software:

1. Obtain your license file from COS@lml.com.
2. Download the LMT from the **LMKR Support Portal - Downloads** page (<http://support.lml.com/>).
3. Install the LMT. Once installed, launch the LMT from **Start>>All Programs>>LMKR>>Licensing>>License Management Tool**.


The LMKR License Management Tool Welcome dialog displays.

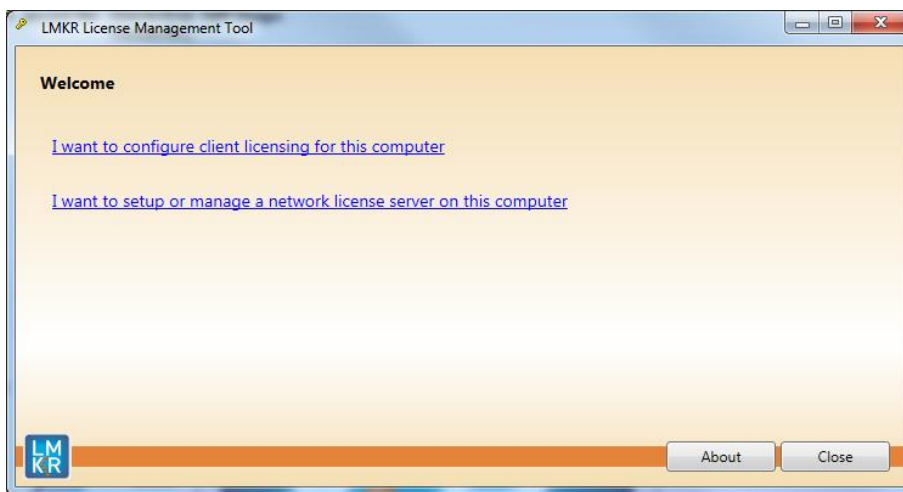

Note: The GVERSE WebSteering software only supports a Standalone Client License type.


4. Click **I want to configure client licensing for this computer.**

 The Client Licenses dialog displays.

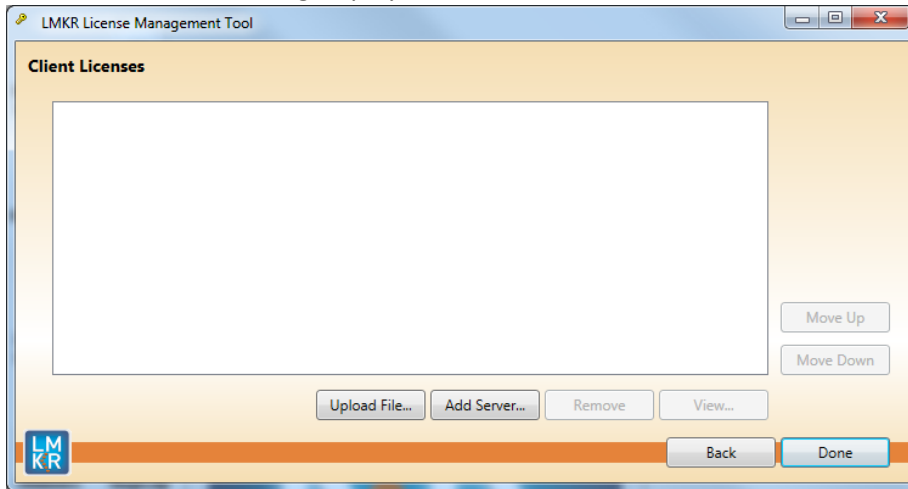


5. Click **Upload file** to select a standalone client license file.
6. Browse to select the license you received from LMKR, and then click **Open**.

 The selected license displays.

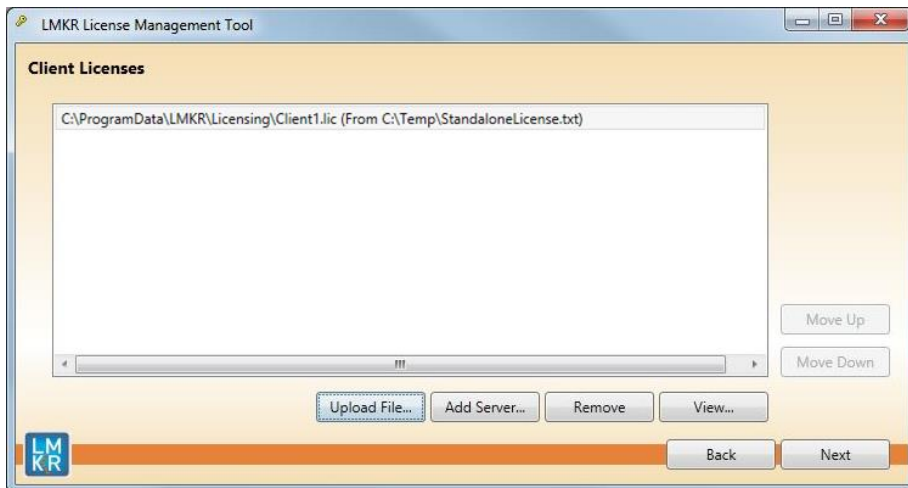

7. Click **Next**.

 On successful license configuration, the 'Pass' message displays as shown in the image below.

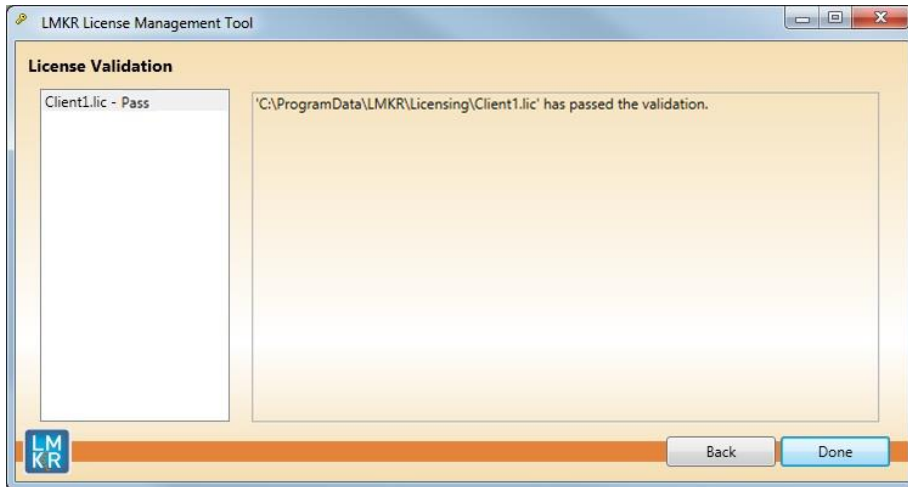

Note: If an error occurs, please contact support@lmkr.com for assistance.

 
8. Click **Done** when finished.

Third Party Applications

LMKR acknowledges that certain third party code has been bundled with, or embedded in, its software. The licensors of this third party code, and the terms and conditions of their respective licenses, may be found in the WebSteering software Help file.

To access the third party license agreements:

1. Click **Help** from the main menu bar.
2. Open the **Third Party Acknowledgements** help topic.

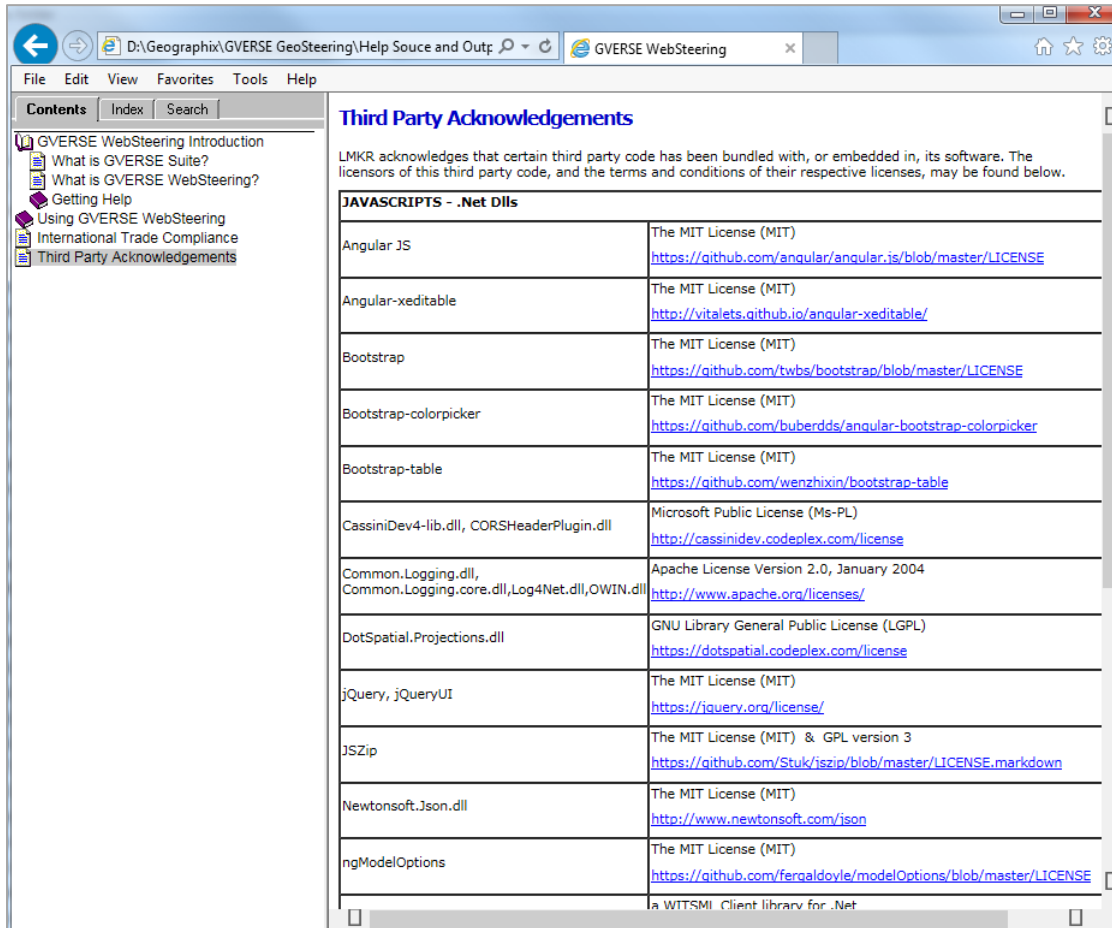

International Trade Compliance

This application is manufactured or designed using U.S. origin technology and is therefore subject to the export control laws of the United States. Any use or further disposition of such items is subject to U.S. law. Exports from the United States and any re-export thereafter may require a formal export license authorization from the government. If there are doubts about the requirements of the applicable law, it is recommended that the buyer obtain qualified legal advice. These items cannot be used in the design, production, use, or storage of chemical, biological, or nuclear weapons, or missiles of any kind.

The ECCNs provided (if available) here represent LMKR's opinion of the correct classification for the product today (based on the original software and/or original hardware). Classifications are subject to change. If you have any questions or need assistance please contact us at support@lmkr.com.

 
Under the U.S. Export Administration Regulations (EAR), the U.S. Government assigns your organization or client, as exporter/importer of record, responsibility for determining the correct authorization for the item at the time of export/import. Restrictions may apply to shipments based on the products, the customer, or the country of destination, and an export license may be required by the Department of Commerce prior to shipment. The U.S. Bureau of Industry and Security provides a website to assist you with determining the need for a license and with information regarding where to obtain help.

The URL is: <http://www.bis.doc.gov>.

Definitions

ECCN - Export Control Classification Number - The ECCN is an alpha-numeric code, e.g., 3A001, that describes a particular item or type of item, and shows the controls placed on that item. The CCL (Commerce Control List) is divided into ten broad categories, and each category is further subdivided into five product groups. The CCL is available on the [EAR Website](#).

The following illustration is a sample:

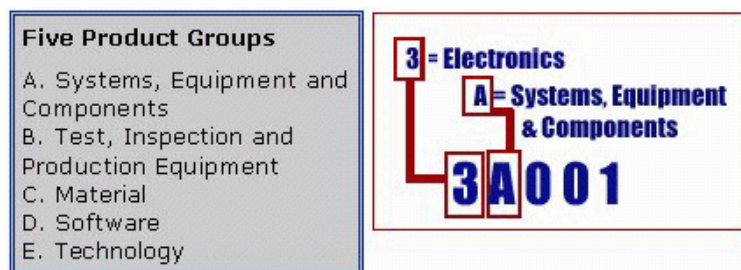

The ECCN number (if available) and License Type for this product are included in the table below. Also included is the date the table was last updated.

Product/Component/R5000	EAR Number	License	Last Updated On
GVERSE WebSteering	EAR99	EAR	11/23/2015

Contacting LMKR Support

LMKR is committed to providing the highest level of technical customer support in the industry. With an average tenure of more than thirteen years, our highly trained and experienced staff of technical analysts is comprised of geoscientists, engineers, land professionals, petrophysicists, and system specialists.

Please refer to our Customer Support timings mentioned below to ensure that you have access to our support analysts assigned to your region. When getting in touch with LMKR support, please remember that real-time support will not be available during bank holidays or after office hours. If you do get in touch with LMKR Support outside of work hours, please leave a voice message with a brief description of the issue that you are facing. Your voice message will be used to automatically create a support case for you. This will enable our analysts to attend to your issue and provide you with a resolution as soon as possible

North and South America	Europe, Middle East & Africa
<p>Monday – Friday 8am-6pm CST Toll Free (US/Canada) : +1 855 GGX LMKR (449 5657) Colombia : +57 1381 4908 United States : +1 303 295 0020 Canada : +1 587 233 4004 *Excluding bank holidays</p>	<p>UK Monday - Friday 8am - 5pm +44 20 3608 8042 *Excluding bank holidays</p> <p>UAE Sunday - Thursday (Dubai GMT+4) 8am - 5pm +971 4 3727 999</p> <p>Egypt Sunday - Thursday +0800-000-0635 *Excluding bank holidays</p>
Asia Pacific & Australian Continent	Southwest Asian countries
<p>Malaysia Monday - Friday (Kuala Lumpur GMT+8) 9am - 6pm +60 32 300 8777 *Excluding bank holidays</p>	<p>Pakistan Monday - Friday (Islamabad GMT+5) 9am - 6pm +92 51 209 7400 *Excluding bank holidays</p>

Helpful Links

Name	Website Address
LMKR Homepage	http://www.lmkr.com
LMKR GVERSE	http://www.lmkr.com/gverse/
LMKR Support Portal	http://support.lmkr.com